


We strongly recommend using only Xstamper® Refill Ink to re-ink your Xstamper pre-inked rubber stamp. It has been specifically formulated to flow cleanly through the micropores of the Xstamper's laser-engraved rubber. Using ink other than Xstamper Refill Ink can clog these micropores and void the Xstamper warranty. Please follow the directions below for your respective Xstamper mount. After re-inking, please allow stamp to sit up to 24 hours to reach maximum saturation.

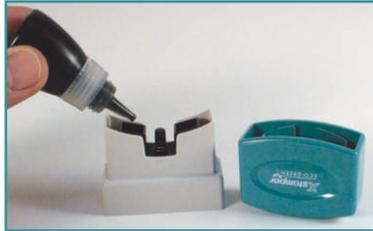

Remove the handle and place 2-4 drops of ink in the openings on either side of the spring as shown.




Slide the impression cartridge out of the handle. Place 2-3 drops of the same color ink in each of the 4 openings as shown.



Remove the handle and place 2-4 drops of the same color ink in the opening in the center of the mount.



Slide the impression cartridge out of the handle. Place 2-3 drops of the same color ink in the opening as shown.

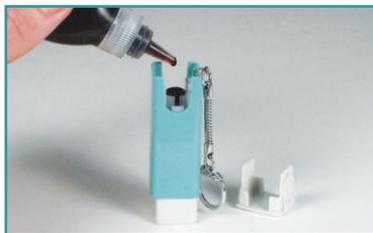


Remove the white cap on top and place 2-4 drops of the same color ink in the opening in the center of the mount.



Slide the impression cartridge out of the handle. Place 2-3 drops of the same color ink in each of the openings as shown.



Firmly hold the teal handle and the white Impression Frame™ and pull apart. Use the corresponding color ink cartridge to put 2-3 drops of ink into the inking hole. Put 2-3 drops into each opening on the frame as well.

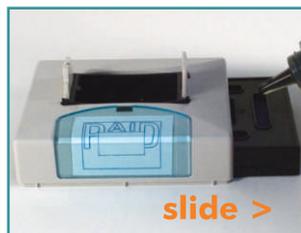

Put a few drops of the corresponding color ink in the XpeDater base and a few in the travel cap as needed.



Put a few drops of the corresponding color ink into the stamp base.